

MANUFACTURER'S ADDRESS AND CONTACT DETAIL



KOVACO
spol. s r.o.

KOVACO spol. s r.o. Veľká Lehota 210, 966 41, Slovakia
Tel.: 00421 45 6830 555, Fax: 00421 45 6830 588
IČO: 36 038 911, IČ DPH/ VAT No.: SK2020065762
[http:// www.kovaco.sk](http://www.kovaco.sk) , e-mail: kovaco@kovaco.sk

1. INTRODUCTION

1.1. GENERAL INFORMATION

The skid-steer loader specified herein meets all requirements under applicable technical standards and safety regulations.

To use this skid-steer loader on public roads, it is critical to first comply with all requirements under existing national standards in the country where the skid-steer loader is used. A driver's license must be obtained from the competent authorities.

Skid-steer loaders are manufactured based on the latest technical knowledge. Therefore, it is sufficient to safely operate the skid-steer loader and maintain its functionality.

All necessary information is provided in this manual. Before placing the skid-steer loader into operation, carefully review this manual in full and follow all provided instructions. This will help you avoid accidents and comply with the terms of the warranty to ensure it remains valid.

It is important to ensure that every operator would become sufficiently familiar with these instructions before beginning any work with the loader.

Before using a loader, make sure the operator:

- Is informed enough about the correct usage and safe operation of the skid-steer loader.
- Ensure that he read and understood operating instructions that apply to the loader.
- Ensure that he read and understood the meaning of all the security labels on the loader.
- Ensure that it is really the same one person operating in the work zone.
- Ensure that the operator understood the control system of the loader in a safe place before starting the work with it.

Thank you for reading and keeping to the instructions of this manual. If you would have any questions or suggestions for the improvement, or you have discovered any errors, contact an Authorized Service Center.

1.2. CE MARKING

The manufacturer uses the CE marking to demonstrate the conformity of the skid-steer loader with standards and regulations valid at the time of sale. Such fact is confirmed by the publication of a CE declaration of conformity. The CE marking is located on the nameplate on the loader itself.

Any interference into the design of the skid-steer loader or its implements or accessories may pose a safety hazard. This is a violation of the CE declaration of conformity and renders it null and void.

The CE declaration of conformity must be carefully archived and available to competent authorities.

